

OPERATING INSTRUCTIONS

SWITCHING THE TOOL ON

-PRESS THE ON/OFF SWITCH

WORKING WITH THE LASER DETECTOR

-THE PRA 20 LASER DETECTOR CAN BE USED WITHIN AN AREA UP TO 400M IN DIAMETER.

THE LASER BEAM IS INDICATED BY VISIBLE AND AUDIBLE SIGNALS

-MOUNT THE PRA 20 SECURELY ON THE TELESCOPIC STAFF OR LEVELING STAFF AND SWITCHING IT ON BY PRESSING THE ON/OFF KEY

-SET THE DESIRED SENSITIVITY BY PRESSING THE LASER PLANE DETECTION TOLERANCE KEY

OPTIONAL SETTINGS

-USE THE AUDIBLE SIGNAL SETTING KEY TO SELECT THE DESIRED VOLUME LEVEL.

SWITCHING ON SETS THE DETECTOR TO THE STANDARD SIGNAL VOLUME. ADJUST THE SIGNAL VOLUME BY PRESSING THIS KEY REPEATEDLY UNTIL THE DESIRED VOLUME IS SET (NORMAL/LOUD/OFF)

-HOLD THE PRA 20 PERPENDICULAR TO THE LASER BEAM PLANE OF ROTATION. THE LASER BEAM IS INDICATED BY VISUAL AND AUDIBLE SIGNALS